


Hurtigguide Looky 10 HD

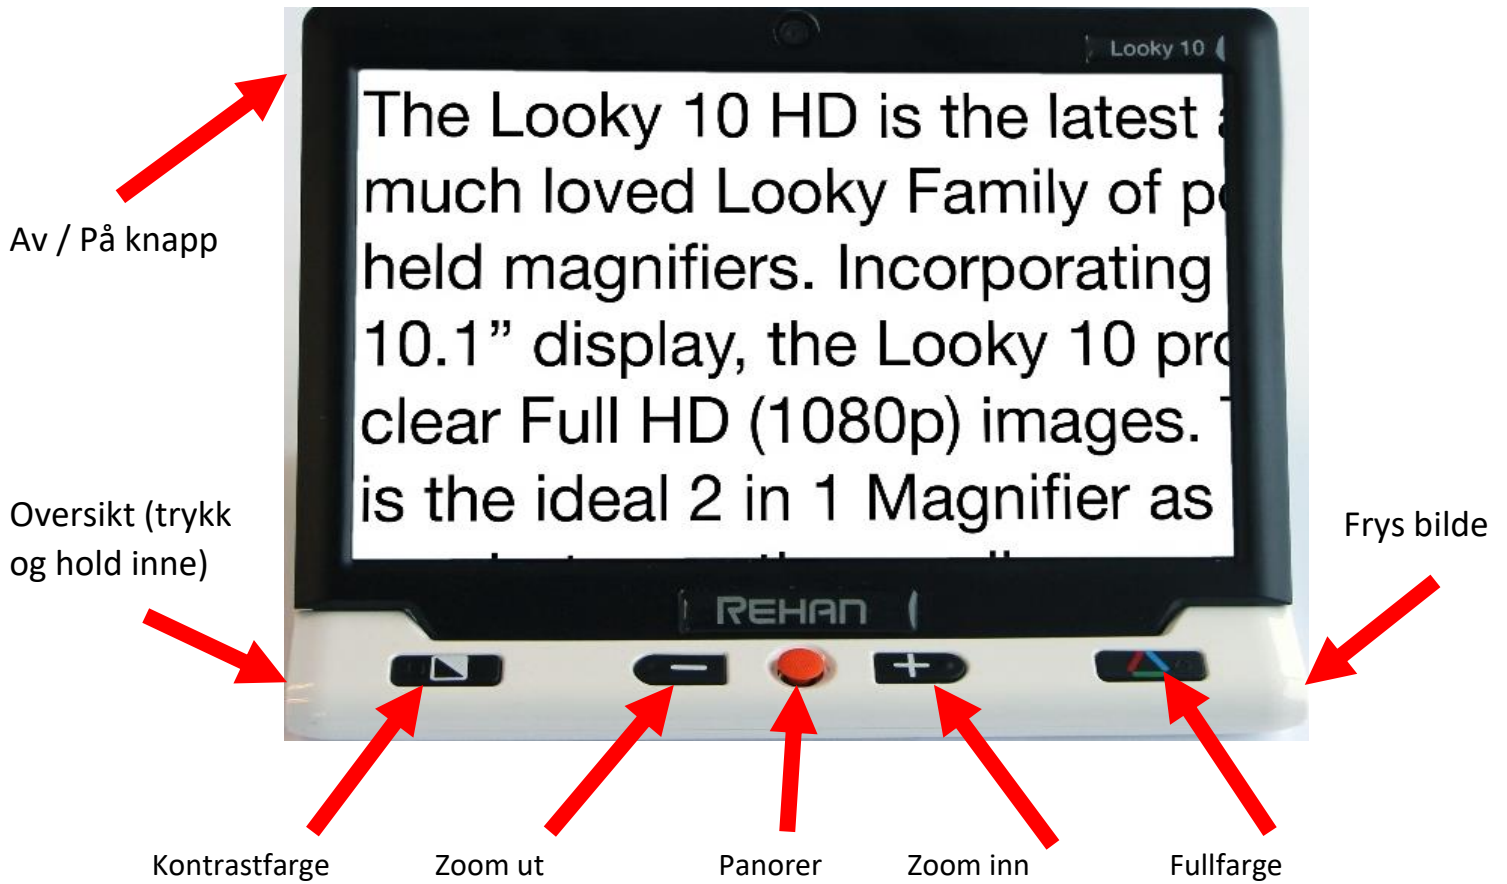

- | | | |
|----|-------------------|-------------------|
| 11 | 11. Power Button | 12. Power Port |
| 12 | 13. HDMI Port | 14. Locate Button |
| 13 | 15. Freeze Button | 16. Camera Switch |
| 14 | 17. USB Port | |

